

**Dr. Schutz®**



**Dr. Schutz® GROUP**

**Dr. Schutz UK Ltd.**

Unit 24, Anglo Business Park  
Smeaton Close  
GB-Aylesbury Bucks HP19 8UP

Tel.: +44 / (0)1296 437827

[www.dr-schutz.com](http://www.dr-schutz.com)  
[info@dr-schutz.com](mailto:info@dr-schutz.com)

Brands of **Dr. Schutz® GROUP** **Dr. Schutz®** **euKula®** **scratchnmore**

Art.-Nr.: 6000643801 | 06/21

# YOUR ANTISLIP APPLICATION GUIDE

a Brand of **Dr. Schutz® GROUP**

## STEP-BY-STEP TO A SAFE FLOOR



### STEP 1

#### Remove loose dirt

Remove loose dirt such as dust, sand, etc. from your floor to be sealed with Quick Fix Antislip using a vacuum cleaner and wipe over with a dust-binding mop.

### STEP 2

#### Intensive cleaning and preparation

Now prepare the cleaning solution.

To do this, add Clean & Strip to warm water up to a mixing ratio of 1:1. We recommend a mixing ratio of 1:3 (750 ml Clean & strip to 2.25 liters of water) The higher the proportion of Clean & Strip, the higher the dissolving power.

Apply the cleaning solution evenly with a mop to the surface to be sealed. Let the cleaning solution work for at least 10 minutes and then scrub the surface with the green cleaning pad. Pick up the dirt with a mop or a wet vacuum cleaner. Now wipe the surface with clear water and a clean mop until it no longer foams. After thorough cleaning, all old care product films and layers of dirt must be removed. After the surface is completely dry, you can proceed with sealing the surface.



### STEP 3

#### Sealing with Quick Fix Antislip

Protect built-in parts in the area close to the floor with a protective tape such as Dr. Schutz ProTape. It is also recommended to use ProTape to create an exact lacquer edge in transition areas (e.g. door areas). Prepare the lacquer roller by placing it in on the holder and remove the lint by swiping over it with an adhesive tape to avoid lint in the lacquer film. Shake Quick Fix Antislip well and homogeneously for at least one minute. Now put a small amount of lacquer on the floor and saturate the lacquer roller with it until it no longer absorbs any lacquer.




Next put a small amount of lacquer on the floor in sections and roll it thinly and quickly crosswise with a consumption of about 50 ml / m<sup>2</sup> (20 m<sup>2</sup> / liter). Make sure that the application is even in the edge and corner areas. Systematically work your way out of room. Always work wet on wet. Do not allow the lacquer edges to dry on the surface, as these would show up after drying. Please remove adhesive tape in areas of transitions immediately after sealing.

### STEP 4

#### Drying and subsequent use

After applying the lacquer, all accessories can be cleaned with water. The area can be carefully walked on after 4-6 hours. After 24 hours, the surfaces can be used carefully again. Wet cleaning or standing water as well as covering the surface with bath mats or rugs should be avoided for at least seven days, as this could damage the lacquer film.

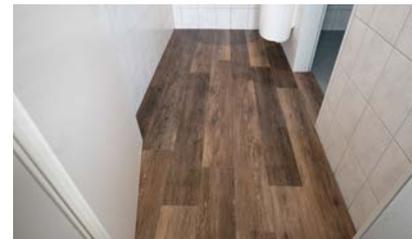

### STEP 5

#### Enjoy

Now you can enjoy the sure-footed and easy-to-clean protection of your floor thanks to Quick Fix Antislip. Floor protection has never been so easy and effective.

Please note: Switch off underfloor heating before the application. Room climate should be within 18 - 22 ° C and 40-65% relative humidity. Floor temperature 15-25 ° C. Avoid drafts when lacquering. Follow our cleaning and care instructions for non-slip floors treated with Quick Fix Antislip.